


# Quick Reference Guide

## Parts Descriptions

その他


Quick Reference Guide

VE-CVC02L Base Unit

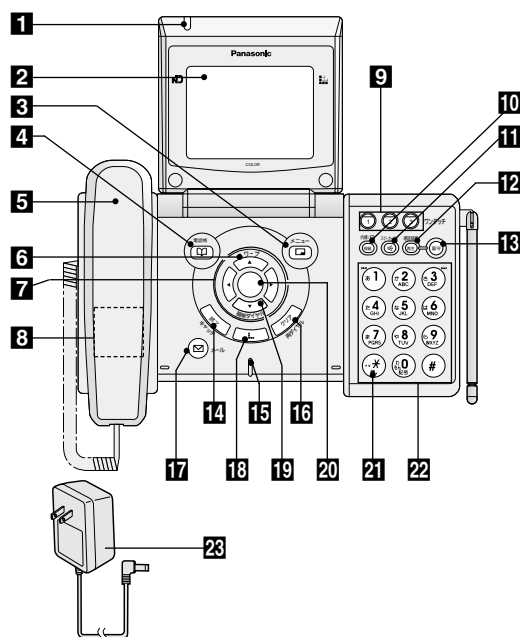

- 1** L lamp
- 2** Angle-adjustable display
- 3** Menu key
- 4** Directory key
- 5** Handset
- 6** L warp key
- 7** Navigation keys
- 8** Speaker
- 9** One-touch keys
- 10** Hold/Extension/Return key
- 11** Speakerphone key · lamp
- 12** Playback/Voice record key
- 13** Voice message key · lamp
- 14** Call waiting/Cancel key
- 15** Microphone
- 16** Re-dial/Clear key
- 17** Mail key
- 18** L key
- 19** Simple dial key
- 20** OK key
- 21** Asterisk key (to switch to DTMF tone)
- 22** Numeral/Character keys
- 23** AC adaptor for VE-CVC02L

VE-CS210A Personal Phone

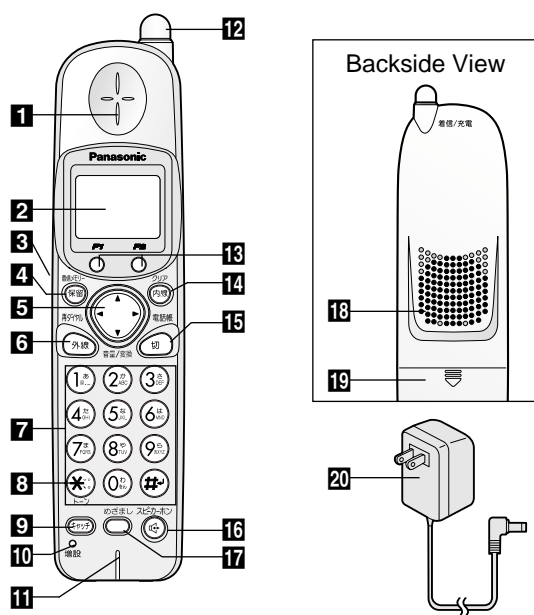

- 1** Earpiece
- 2** Display
- 3** Talk key
- 4** Hold/Call log key
- 5** Navigation/Re-dial/Directory keys
- 6** Send/Answer key · lamp
- 7** Numeral/Character keys
- 8** Asterisk key (to switch to DTMF tone)
- 9** Call waiting key
- 10** Personal phone registration key
- 11** Microphone
- 12** Call/Charge indicator
- 13** F1/F2 key
- 14** Extension/Clear key
- 15** End key
- 16** Speakerphone key · lamp
- 17** Alarm key
- 18** Speaker
- 19** Battery cover
- 20** AC adaptor for VE-CS210A

注) 日本国内専用です。電圧、電話交換方式、電波法などの異なる海外では使用できません。

**CAUTION:** These telephones are for use in Japan only. They cannot be used in other countries because of differences in voltages, telephone switching system and radio regulation laws.

# Basic Operations

## Base unit (VE-CVC02L)



### ■To make a call

Lift the handset. → Dial.

### ■To receive a call

When the phone rings... → Lift the handset.

### ■To make a call using the speakerphone (Hands-free talk)

Dial. → Press **スピーカホン** (11). → Talk to the microphone.....

To end the call, press **スピーカホン**.

### ■To receive a call using the speakerphone (Hands-free talk)

When the phone rings... → Press **スピーカホン** (11).

→ Talk to the microphone.....To end the call, press **スピーカホン**.

### ■To place the current call on hold

Press **保留** (10) during a call.

### ■To retrieve the held call

● During a call through your handset, press **保留** (10) again.  
If you have returned the handset on the base unit, lift the handset.

● During Hands-free talk, press **スピーカホン** (11).

### ■To transfer the held call to the personal phone

Press **保留** (10) during a call. → Press **1** - **4** (Extension No.). → Place the handset on the base unit when the other party answers.

(Call transfer is completed after the other party presses **外線**.)

### ■To set a calendar

With the handset placed on the base unit, press **メニュー** **2** **0**

→ Enter the year. → Enter the month in 2 digits and date in 2 digits (Press **0** **1** **0** **1** for January 1st, for example).

→ Enter the time in 4 digits. (Press **2** **3** **3** **0** for 11:30 P.M., for example). → Press **メニュー** (3).

### ■To use TAM (Telephone Answering Machine)

Set the calendar beforehand.

When you leave home, press **留守** (18) to turn on the lamp.

(To deactivate, press **留守** again to turn off the lamp.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.

Then, the **留守** lamp starts flashing. → When you return home, press **留守** to play back the messages.

The **留守** lamp turns off and the answering mode is deactivated.

To play back the message while TAM is deactivated, press **再生** (12).

\*Up to 59 messages can be recorded for 10 minutes in total.

### ■To hear recorded messages while away from home (Remote control)

#### Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press **メニュー** **2** **1**

→ Enter the desired 4-digit number. → Press **メニュー**.

When you leave home, press **留守** to turn on the lamp.

### To hear messages

Dial your home phone number. → While the outgoing message is played back... → Enter your remote control number.

→ Announcement → Press **2**. → You will hear recorded messages if any.

### NOTE

- This operation can be made only from telephones which can send DTMF signals.



## Personal phone (VE-CS210A)

### ■To make a call

Lift the personal phone from the charger or press **外線** (6).

→ Dial.....To end the call, place the personal phone on the charger or press **切** (15).

### ■To receive a call

When the phone rings... → Lift the personal phone from the charger or press **外線**. → Talk.....To end the call, place the personal phone on the charger or press **切**.

### ■To make a call using the speakerphone (Hands-free talk)

Lift the personal phone from the charger and press **切**. →

Dial. → Press **スピーカホン** (18). → Talk to the microphone.....To end the call, place the personal phone on the charger or press **切**.

### ■To receive a call with the speakerphone (Hands-free talk)

When the phone rings... → With the personal phone placed on the charger, press **スピーカホン** or **外線**.

→ Talk to the microphone.....To end the call, press **切**.

### ■To place the current call on hold

Press **保留** (4) during a call.

### ■To retrieve the held call

Press **外線**.

### ■To transfer the held call to the base unit

Press **内線** (14) during a call. → Press **0**.

→ Place the personal phone on the charger, or press **切** when the other party answers.(Call transfer is completed after the other party goes on-hook and off-hook.)

### ■To transfer the held call to another personal phone

Press **内線** (14) during a call. → Press **1** - **4** (Extension No.). → Press and hold **トーク** (3) until the Speakerphone

lamp lights. → Press and hold **トーク** until you finish talking. → Place the personal phone on the charger, or press **切** when the other party answers.

(Call transfer is completed after the other party presses **外線**.)

\*Each party can speak by pressing **トーク**. Note that simultaneous speech is not possible. Only one party may speak at a time.

### ■To set an alarm

This is a one-time alarm setting.

Please set the alarm each time you need it.

Lift the personal phone from the charger and press **切**.

→ Press **めざまし** (17). → Enter the time in 4 digits (Press **0** **7** **3** **0** for 7:30 A.M., for example).

→ Press **F1** (18). → Select the tone. (Press **15** for alarm tone or press **16** for ringing tone.) → Press **F1**.

\*“(□)” appears on the display.

- The number after the button shows the location of the button described in the previous page.